

VORTEXSERIES
mono 65^{V2}
65% MECHANICAL KEYBOARD



**WIRED
MECHANICAL KEYBOARD**
MANUAL BOOK

**TERIMA KASIH
TELAH MENGGUNAKAN PRODUK
VORTEXSERIES**


Pelanggan Yang Terhormat,
Terima kasih atas kepercayaan dan kesetiaan dalam memilih produk kami. Kami sangat menghargai hubungan yang telah kami bangun. Kami berkomitmen untuk memenuhi harapan dan memberikan pelayanan terbaik. Terima kasih atas kesempatan untuk melayani pengguna produk kami!

Salam Hormat
VortexSeries

Thank you for choosing our VortexSeries MONO SERIES mechanical keyboard. This keyboard offers a range of features, including customizable lighting effects, and can be fully DIY customized and assembled to suit your competitive needs, interests, and preferences. Enjoy the hands-on experience of building your keyboard while achieving the precise functionality and style you desire. We hope it brings you a new level of satisfaction and creativity.

THE SCOPE OF PRODUCTS:
The VortexSeries **MONO 65 V2** mechanical keyboard features a compact 66-key layout, offering versatile customization. It includes single colour LED, south facing LED, 5 layer filling for enhanced acoustics, detachable USB Type-C cable, gasket mount design, hotswap 5 - Pin universal and is compatible with multiple operating systems.

HARDWARE REQUIREMENTS:
A mobile phone or computer with Bluetooth and a USB port available for connecting the device.

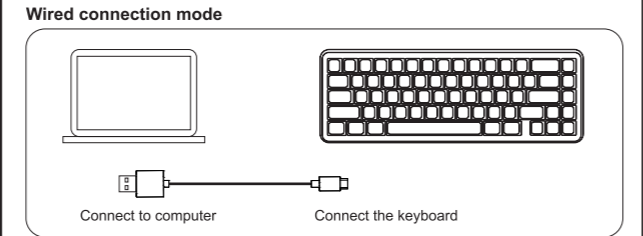

MONO 65 V2 Keyboard Wired Mode Connection Method:

- Plug the cable into the keyboard and the computer.
- Then slide the keyboard's mode switch key position in the middle.
- The keyboard will be connected to the computer via USB.

- MONO 65 V2 FN KEY OPERATIONS**
- Fn + Shift** = Light mode/effects
 - Fn + X** = Light on/off
 - Fn + Win** = Lock / Unlock WIN Key
 - Fn + ↑ ↓** = Backlight brightness adjustment
 - Fn + ← →** = Lighting effect direction adjustment
 - Fn + [{ }]** = Backlight speed adjustment

When the Windows key is locked it will be disabled, the key will keep lighting and cannot be activated until unlocked



Note: The **WIN** and **ALT** keys will be interchanged when switching OS Mode. Please avoid locking the Win key.

- Fn + A** = Enter MAC OS Mode
- Fn + S** = Enter WIN Mode

- Description of FN multimedia function key of WIN system:**
- Fn + Esc** = `
 - Fn + F1**
 - Fn + F2**
 - Fn + F3**
 - Fn + F4**
 - Fn + F5**
 - Fn + F6**
 - Fn + F7**
 - Fn + F8**
 - Fn + F9**
 - Fn + F10**
 - Fn + F11**
 - Fn + F12**
 - Fn + U** = PrtSc
 - Fn + I** = ScrLk
 - Fn + O** = Pause
 - Fn + Del** = Ins
 - Fn + PgUp** = End
 - Fn + H** = Screen Brightness Down
 - Fn + J** = Screen Brightness Up
 - Fn + K** = Win+Tab
 - Fn + L** = Win+E
 - Fn + V** = Play/Pause
 - Fn + B** = Previous
 - Fn + N** = Next
 - Fn + M** = Mute
 - Fn + . <** = Vol Down
 - Fn + . >** = Vol Up

- FN multimedia function key description for MAC system:**
- Fn + Esc** = `
 - Fn + F1**
 - Fn + F2**
 - Fn + F3**
 - Fn + F4**
 - Fn + F5**
 - Fn + F6**
 - Fn + F7**
 - Fn + F8**
 - Fn + F9**
 - Fn + F10**
 - Fn + F11**
 - Fn + F12**
 - Fn + U** = PrtSc
 - Fn + I** = ScrLk
 - Fn + O** = Pause
 - Fn + Del** = Ins
 - Fn + PgUp** = End
 - Fn + H** = Screen Brightness Down
 - Fn + J** = Screen Brightness Up
 - Fn + K** = Task Center (Ctrl+Up)
 - Fn + L** = Launchpad
 - Fn + V** = Play/Pause
 - Fn + B** = Previous
 - Fn + N** = Next
 - Fn + M** = Mute
 - Fn + . <** = Vol Down
 - Fn + . >** = Vol Up

When using the Mono Series mechanical keyboard and the computer cannot recognize it, it should be considered that poor end contact may cause it to need to be replaced and plugged into another computer's USB port for use.

Troubleshooting Freezing or Stopping Issues:
When the product is stuck or a key character is not functioning or does not move during use, it should be considered that the shaft pin is loose, which may be caused by poor contact after multiple insertion and extracion. The shaft should be pulled out to see if the shaft pin is bent. In addition to ruling out the above reasons, if it still cannot be solved, please call the VortexSeries Product Service Hotline.

Disposal of Damaged Products:
The product of VortexSeries brand are all electronic products, so for the sake of stable product performance and user safety, the products can only be used indoors at room temperature. Please do not use them at high temperatures or near ignition sources. If the product is damage and cannot be repaired, please do not disassemble or throw it into the fire to avoid accidental danger. It should be sent to a professional waste disposal station or a dedicated recycling bin for disposal.

- PACKING LIST:**
1. Mono 65 V2 Keyboard.
 2. Keycaps Puller
 3. Switch Puller
 4. Type - C Cable
 5. A copy of the manual and warranty card.

